

- **RU** User manual Dryer drum 2
- S.R. Misconception for use 33 Drying machine

USER MANUAL





CONTENT

1.SAFETY INFORMATION	3	
2.SAFETY INSTRUCTIONS		
3.PRODUCT DESCRIPTION		8
4.CONTROL PANEL	9	
5.PROGRAM		10
6.MODES		13
7.BEFORE FIRST USE	14	
8. DAILY USE16		
9.USEFUL TIPS	19	
10.CARE AND CLEANING		20
eleven.TROUBLE-SHOOTING		
12.TECHNICAL DATA	26	
13.ACCESSORIES		27
14. QUICK GUIDE	29	
15.PRODUCT INFORMATION ACCORDING TO EU REGULATION		
1369/2017		31

FOR PERFECT RESULTS

Thank you for choosing this AEG product. It will serve you flawlessly for many years - after all, we created it using innovative technologies that help make life easier and implement functions that cannot be found in conventional devices. Take a few minutes to read to ensure you get the most out of your purchase.

On our website you will be able to:



Find product recommendations, instruction manuals, troubleshooting wizards, maintenance information:

www.aeg.ru/support



Register your product for better service: www.promo.electrolux.ru

Purchase additional accessories, consumables and branded spare parts for your device: www.electrolux-1.ru

CUSTOMER SUPPORT AND SERVICE

We recommend using original spare parts.

When contacting the service center, you should have the following information on hand: model, product number (PNC), serial number. This information can be found on the rating plate.

- A Warning/Important Safety Information. General
- (i) information and recommendations
- 🖉 Environmental Information

The right to make changes is reserved.

1. SAFETY INFORMATION

Before installing and operating the device, carefully read the attached manual. The manufacturer is not responsible

liability for any injury or damage resulting from improper installation or operation. Always keep these instructions handy in a safe place for future reference.

Please read the attached instructions.

1.1 Safety of children and persons with disabilities



ATTENTION!

There is a risk of suffocation, injury or permanent disability.

• This appliance can be used by children over 8 years of age and persons with reduced mobility. physical, sensory or mental capabilities and lack of experience or knowledge unless under the supervision of a person responsible for their safety or after receiving

appropriate instructions to enable them to operate the appliance safely and to understand the hazards involved in its use.

 Children aged 3 to 8 years, as well as persons with severe or complex health problems, should not be near the device unless they are supervised at all times.

- Children under 3 years of age should not be near the appliance unless supervised by an adult at all times.
- Do not allow children to play with the device.
- Keep all packaging materials out of the reach of children and dispose of materials properly.
- Keep detergents out of the reach of children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance is equipped with a child safety device, it must be switched on.
- Cleaning and user-accessible maintenance of the device should not be carried out without supervision by children.

1.2 General safety instructions

- Do not change the specifications of this device.
- If the dryer is installed on top of a washing machine, use an installation kit. The vertical installation kit, available from authorized retailers, can only be used with appliances that are listed in the instructions supplied with the accessory.

Please review them carefully before installation (see Installation Instructions Insert).

- The device can be installed either separately or under the countertop, if there is enough space underneath (see insert with installation instructions).
- Do not install the appliance behind a keyed door, a sliding door, or a door with hinges on the opposite side of the appliance door that would prevent the appliance door from opening completely.

- The bottom vent should not be blocked by carpet, rug, stand or any other floor covering.
- WARNING: The appliance must not be connected to the mains power supply through external switching devices such as timers or through circuits that are regularly switched on and off by the electricity supplier.
- Insert the power cable plug into the socket only after completing the installation process of the device. Make sure that the power cord plug is accessible after installation.
- If the power supply cord is damaged, it must be replaced by the manufacturer to avoid electric shock.

an authorized service center or a similarly qualified technician.

- Do not exceed the maximum permissible load of 8.0 kg (see chapter "Program table").
- Do not use the appliance on items that have been cleaned with industrial chemicals.
- Remove any lint that has accumulated around the appliance, as well as any packaging.
- Do not use the device without a filter. Clean the lint filter after or before each use.
- Do not tumble dry unwashed items.
- Before tumble drying items contaminated with substances such as cooking oil, acetone, alcohol, gasoline, kerosene, stain removers, turpentine, wax and wax removers, they should be washed in hot water with an increased amount of laundry detergent.

- Do not tumble dry foam rubber items (latex sponge), shower caps, waterproof textiles, rubber-based items, clothing or pillows with foam rubber inserts.
- Fabric softeners and other similar products should be used according to their manufacturer's directions.
- Remove any items that could cause a fire, such as lighters or matches.
- WARNING: Never stop tumble dryers until the drying cycle has completed unless the laundry is quickly removed and spread out to allow heat dissipation.
- Before performing any cleaning or maintenance operations, turn off the appliance and unplug the power cord from the outlet.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all packaging.
- Do not install or connect the device if it is damaged.
- Follow the Installation Instructions supplied with the device.
- Never forget about safety precautions when using it. moving: the device is heavy. Always wear protective gloves and closed shoes.
- Do not install or operate the device in areas with temperatures below 5°C or above 35°C.
- The floor at the installation site of the device must be level, durable, clean and not afraid of heating.
- Make sure there is space between the bottom of the appliance and the floor. sufficient ventilation.

- The device must always be in an upright position when moving.
- The back of the appliance should be against a wall.
- After placing the instrument in position, use a spirit level to ensure that the instrument is properly leveled. Otherwise, adjust the height of the legs accordingly.

2.2 Connection to

electrical networks



ATTENTION! There is a risk of fire and electric shock.

• Insert the power cable plug into the socket only at the end of installation of the device. Make sure after installation there is access to the plug.

- The device must be grounded.
- Make sure that the parameters indicated on the rating plate are correspond to the characteristics of the electrical network.
- Connect the machine only to a properly installed electrical outlet with a grounding contact.
- Do not use tees or extensions.
- To disconnect the machine from the electrical outlet, do not pull on the power cord. Always use the fork only.
- Do not handle the power cord or plug with wet hands.

2.3 Use



ATTENTION!

There is a risk of injury, electric shock, fire, burns or damage

device.

- This appliance is intended for household use only.
- Do not dry damaged (torn, frayed) items with padding or inserts.
- If you washed your laundry with stain remover, run an additional rinse cycle before running the drying cycle.
- Dry only fabrics that are suitable for tumble drying. Follow the cleaning directions on the label.
- Do not drink condensation/distilled water or cook food with it. This may cause harm to the health of people and pets.
- Do not sit or stand on an open appliance door.
- Do not dry unwrung items in the appliance.

2.4 Interior lighting



ATTENTION! There is danger injuries.

 About lamps inside the appliance and lamps sold separately as replacement parts: These lamps are designed to operate in household appliances under extremely difficult temperature, vibration and humidity conditions or

are intended to transmit information about the operating status of the device. They are not intended for use in other appliances and are not suitable for domestic lighting.

 LED glow in the visible part of the spectrum: do not allow light beam entering directly into the eyes.

• To replace the interior light bulb, contact

authorized service center.

2.5 Care and cleaning



ATTENTION!

This may result in damage to the device or injury.

- Do not use water supply to clean the device. water or steam pressure.
- Clean the device with a soft, damp cloth. Use only neutral detergents. Do not use abrasives, scratching sponges, solvents or metal objects.
- Be careful when cleaning the device to avoid damage the cooling system.

2.6 Compressor



ATTENTION! There is a risk

damage to the device.

• The heat pump of this dryer and its circuit are filled with a special

a refrigerant that does not contain fluorine- and chlorinecontaining hydrocarbons. The circuit must remain sealed. Damage to the system may result in leakage.

2.7 Service

- To repair the device, contact an authorized service center.
- Use only original spare parts.

2.8 Disposal

ATTENTION!

There is danger injury or suffocation.

3. PRODUCT DESCRIPTION

- Disconnect the appliance from the power supply and water supply.
- Cut the power cable as close to the appliance as possible and dispose of it.
- Remove the door latch to prevent children or pets from becoming trapped in the drum.
- Dispose of the product in accordance with local waste electrical and electronic equipment (WEEE) regulations.



- 1 Condensate container
- 2 Control panel
- 3 Interior lighting
- 4 Appliance door
- 5 Filter

- 6 Rating plate **V**entilation slots
- 7
- 8 Capacitor cover
- 9 Cover to n<u>d</u>ensor
- 10 We regulate s e legs

i To make loading laundry easier and installation of the device door is possible re-hanging the door (see separate brochure).

4. CONTROL PANEL



4.1 Display



symbol Ol on display	Description of the symbol la
	maximum load of laundry
Ċ	delayed start option enabled

Symbol on display	Description of the symbol
30'-20h	selection of delay start time (from 30 minutes to 20 hours)
1:50	cycle time indication
Ç€	beep is turned off
•	Child lock enabled
€ [™]	"Drying time" option enabled
101-2:00	selection of drying time (from 10 minutes to 2 hours)
<i>_</i> ,	indicator: <i>drain the water from the condensate container</i>
۲	indicator: <i>Clean the filter.</i>
≣	indicator: <i>check the condition of the condensate collector</i>
	drying level option: iron, closet, closet+, very dry
ECO	Option ECO included
d₿	Very Quiet option enabled
43	Refresh option enabled
+30 _{min.} , +50 _{min.} , +90 _{min.}	extension of the default duration of the anti-crease phase: +30 min, +60 min, +90 min)
555	indicator: drying phase
Y	indicator: <i>cooling phase</i>
Ť	indicator: <i>anti-crease phase</i>

5. PROGRAM

Program	Loading1)	Properties / Symbols on the	e label ₂₎
(3) Cotton	8.0 kg	Cotton.	/00
	3.5 kg	Synthetic or mixed fabrics.	/000

Program	Loading1)	Properties / Symbols on the label ₂)	
Mix Very fast	3 kg	Cotton and synthetic fabrics.	/000
		Woolen fabrics. Gentle drying of wo designed for hand washing. Remov immediately after completing the p	e items
Solution Wool	1 kg	WOOL HAND WASH SA	
		The Woolmark Company has appro- machine's drying program for wool labeled "hand wash" when drying ir with the appliance manufacturer's i For other types of product care, foll instructions on the product label. M	items accordance nstructions. ow the 1641
		The Woolmark symbol is a certificat many countries.	ion mark in
😯 silk 🛍	1 kg	Gentle drying of hand-washable silk items.	
Easy ironing	1 kg (or 5 shirts)	Easy care for linen that requires mir Drying results may vary depending and type of fabric. Shake each prod before loading. When the program quickly remove the items from the o hang them on a hanger.	on the type uct you load has finished,
Bed sheets	3 kg	Bed linen (sheets, duvet covers, pillowcases, mattress pads).	/000
গি Sports od ewaiting	2 kg	Sportswear, clothing made from thin and light fabrics, microfiber and polyester.	/000

Program	Loading1)	Properties / Symbols on the	label ₂₎
Outerwear	2 kg	Streetwear, technical clothing, sportswear, brushed fabrics, waterproof and breathable jackets, windbreakers with a removable fleece or inner insulating layer. Can be tumble dried.	/000
Blankets	3 kg	Single or double duvets and pillows (feather, down or synthetic filling).	/000

1) Maximum weight is for dry items.

2) The meaning of fabric care labels is given in the chapter DAILY USE: preparing laundry.

3) Program ECC cotton combined with customization*into the cupboard* Add. the degree of drying is using the standard program for cotton in accordance with EU Commission Regulation No. 392/2012. It is suitable for drying cotton laundry with normal moisture levels and is the most energy efficient program for drying wet cotton laundry.

5.1 Selecting programs and options

			Options		
Programs1)	<pre>//// Add. degree drying</pre>	<mark>dB</mark> Very quiet	记 Anti- crease tion	び Lighting live	^{ᠿ∭} Time drying
⊂ \$ Cotton	•	•	-	•	•
△ Synthetics	-	•	•		•
Very Fast Mix					•
Swool					■ 2)
🕄 silk 🕮					
Easy ironing			•		
🕏 Bed sheets			•		
ੰ Sportswear			•		
안 Outerwear					

			Options		
Programs1)	//// Add. degree drying	^{dB} Very b quiet	记 Anti- crease tion	び Lighting live	^{ᠿ∭} Time drying
Blankets					

1) One or more options can be selected simultaneously with the program.

2) See Chapter "OPTIONS": Drying time in the Wool program

5.2 Energy consumption data

Program (Program)	Spin at / residual moisture ness	Drying time1)	Energy supply treble tion2)	
	Cotton ECO 8.0 kg			
Into the cupboard	1400 rpm / 50%	156 min	1.31 kWh	
	1000 rpm / 60%	173 min	1.47 kWh	
I ron	1400 rpm / 50%	120 min	0.94 kWh	
	1000 rpm / 60%	137 min	1.12 kWh	
Cotton ECO 4.0 kg				
Into the cupboard	1400 rpm / 50%	93 min	0.72 kWh	
	1000 rpm / 60%	105 min	0.83 kWh	
Synthetics 3.5 kg				
Into the cupboard	1200 rpm / 40%	65 min	0.47 kWh	
	800 rpm / 50%	80 min	0.60 kWh	

1) In case of partial loads, the cycle time is shorter and the appliance uses less electricity.

2) Incorrect ambient temperature or insufficient spinning of laundry may result in longer cycle times and increased energy consumption.

6. MODES

6.1 Add. drying degree

This option allows you to achieve the required degree of drying. Possible selections:

a = = - ready for ironing – level**under the iron**.

 $\underline{\square}^{+} = = - ready for storage - level in the closet +.$

____ = ≡ - ready for storage level**very dry**.

6.2 Very quiet

The device operates with a reduced noise level, which does not affect the quality of drying. The appliance runs slower and the cycle takes longer.

6.3 🛇 ECO

By default, this option is enabled when all programs are selected.

Power consumption is at a minimum level.

6.4 Anti-crease

Increasing the standard time of the "anti-crease" phase (30 minutes) at the end of the drying cycle to 120 minutes. At the end of the drying phase, the drum rotates from time to time to prevent the fabric from wrinkling. During the Anti-Wrinkle phase, the laundry can be removed from the dryer.

6.5 Refresh

Used to refresh laundry after storage. The maximum load cannot exceed 1 kg.

6.6 🕬 ying time

For cotton, synthetic or blended fabrics. The user can independently set the drying time from 10 minutes to 2 hours (in steps of 10 minutes). When choosing

7. BEFORE FIRST USE

i

On first launch device blockers with the back of the drum are removed automatically. This may be accompanied by some noise. When this option reaches the maximum value, the loading indication disappears.

6.7 đrying time in the Wool program

This option is applicable to the Wool program and is used to adjust (increase or decrease) the final drying level.

6.8 Start delay

i

Delay the start of the drying program from 30 minutes (minimum) up to 20 hours (maximum).

1. Select drying program and options.

2. Touch the Delay Start button the required number of times.

The display will show the value

delays (for example, **12** h to start program after 12 hours).

3. To enable the option start, tap the Pause

⊕ Delay ▷ll Start/

button. The display will begin counting down the time remaining until the start.

6.9 Sound signal

A sound signal is issued in the following cases:

- cycle completion
- beginning and end of the "anti-crease" stage

By default, the beep is always on. Using this option, you can enable or disable the sound signal.

To unlock the locks on the back of the drum:

1. Turn on the device.

2. Set any program.

3. Press the Start/Pause button. The drum will begin to rotate. Rear side blockers the reels will be automatically unlocked.

Before using the dryer:

i

• Wipe the dryer drum with a damp cloth.

• Run a 1-hour program with wet laundry.

At the beginning of the drying cycle (first 3-5 minutes), the noise level may be slightly higher. This is explained starting the compressor. This is normal for appliances with compressors such as refrigerators or freezers.

7.1 Unusual odor

The device is tightly sealed with packaging.

An unusual odor may be heard after unpacking the product. This normal situation for a new product.

The device uses

i

various types of materials, the combined use of which can lead to the formation of an unusual odor.

With use, after several drying cycles, the unusual odor gradually disappears.

7.2 Noise during operation

As the drying cycle progresses, a variety of sounds can be heard at different times. noises it's absolutely normal sounds arising during work device.

Compressor operation.



Drum rotation.



Fan rotation.



Pump operation, moving condensate into the tank.



8. DAILY USE

8.1 Preparing laundry

Ø

After the wash cycle clothes often happen mixed and confused together. Loading mixed and tangled clothes affects drying efficiency. To provide proper air flow and even drying when loading into the drum, it is recommended to shake the clothes and putting it in one thing at a time.

To ensure proper drying progress:

- Close the zippers.
- Fasten the buttons or other fastenings of the duvet covers.
- Do not dry ties or ribbons (such as apron strings) loosely. Tie them before starting the program.

• Remove all contents from pockets.

• Turn cotton-lined items inside out. The cotton side should be on the outside.

- Always select a program suitable for the type of laundry.
- Do not load light-colored fabrics with your clothes. rich colors.
- For items made of jersey and cotton, as well as for knitted items use an appropriate program to reduce shrinkage.
- Do not exceed the maximum load given in the "Programs" chapter or

displayed on the display.

• Only dry items that are suitable for tumble drying.

Refer to the information on product labels.

- Do not dry large and small items together. Small items can become tangled in larger items and remain wet.
- Shake large items and fabrics before placing them in the dryer. This will avoid pockets of moisture in the fabric after the drying cycle.

Product Label I	Description
Ø	Linen suitable for tumble drying.
$\overline{\mathbf{O}}$	Laundry suitable for tumble drying at high temperatures.
\odot	Linen that can only be tumble dried at low temperatures.
	Laundry not suitable for tumble drying.

8.2 Loading laundry



WARNING

Make sure that laundry is not caught between the door and rubber seal.



1. Pull and open the appliance door.

- 2. Load laundry one item at a time.
- 3. Close the appliance door.

8.3 Switching on the device



To turn on the device:

Click on the button \bigcirc On off. If the device is turned on, a series of indicators will light up on the display.

8.4 Function Auto shutdown

To reduce energy consumption Auto power off function tion automatically off plugs the device into in the following cases:

if you haven't touched sensor Start/Pause for a while five minutes;
 after 5 minutes after the graduation cycle.

Click on the button ① On/Off for turning on the device. If the device is turned on, a series of indicators will light up on the display.

8.5 Installing the program



To select a program

use the program selector. The approximate duration of the program is shown on the display.

Ø

Actual drying time will depend on the load (quantity and composition things), temperature in room and humidity laundry after the spin cycle.

8.6 Options

You can select one or more special options at the same time as the program.



To turn an option on or off, touch the corresponding button or combination of 2 buttons.

the corresponding symbol will appear on the display or the LED of the corresponding button will light up.

8.7 Option "Child lock"

To prevent children from playing with the device, you can install a child lock. The Child Lock option locks all touch buttons and

program selector (button **Off**not blocked).

The "Child Lock" option can be

(1) On/

enabled:

 before touching the button
 the device will be impossible to start;

• after touching the button Pause- selection and launch of programs and options will not be available.

Setting the "Child Lock" option:



1. Turn on the dryer.

2. Select one of the available programs.

3. Touch and hold two buttons at the same time.

The symbol will appear on the display

 To turn off the Child Lock feature, touch again. the above buttons so that this symbol disappears from the display.

8.8 Starting the program



To run the program:

Touch the button **Start/Pause**. The device will start working, and the LED above the button will stop blinking and light up continuously.

8.9 Program change

To change the program:

- 1. Press the On/Off button turn off the device.
- 2. Press the On/Off button again to turn on the device.
- 3. Set a new program.

8.10 End of the program

i

Do the cleaning filter and empty Condensate container after each cycle drying (See chapter "CARE AND CLEANING").

At the end of the drying cycle, the symbol flashes on the display. If The Sound Alarm artion is turned on, for

one minute there will be an intermittent beep will sound.



If the device is not turn it off, it will start anti-crease stage (not applicable to all programs). Flashing symbol indicates execution of the stage anti-crease. During After completing this step, the laundry can be removed from the appliance.

Removing laundry:

- 1. To turn off the device, press for 2 seconds on the On/
- 2. Open the appliance door.
- 3. Take out the laundry
- 4. Close the appliance door.

Possible reasons unsatisfactory drying results:

 Unsatisfactory level of drying at settings according to default. See chapter Adjusting the default dryness level

9. USEFUL TIPS

9.1 Recommendations for

environmentally friendly

use

- before drying, wring out the laundry well
- · Do not exceed the load limits indicated in the Program Chart.
- Clean the filter after each drying cycle
- Do not use fabric softener during washing if the laundry is to be dried. Tumble dried laundry automatically becomes soft.
- The water from the pull-out water tank can be used for ironing. First, the water should be filtered to remove any remaining textile fibers (a regular coffee filter will do this).
- Always ensure that the ventilation openings in the base of the appliance are not blocked.
- · Ensure good ventilation where the device is installed.

9.2 Adjusting the default degree drying

To change the default drying level:

- 1. Turn on the device.
- Wait approximately 8 seconds.

3. Select one of the available programs.

 The room temperature is too high or too low.

The optimal room temperature is between 18°C and 25°C.

4. Touch and hold the buttons at

^{dB} Very the same time

quietAnd Refresh. One of

the symbols will appear on the display:

LU_ – Maximum degree drying

- **[D±** Increased degree of drying
- **LDE** Standard degree of drying
- 5. To select the desired level,

touch the button **Start/Pause** until the desired degree of dryness is achieved.

Degree su- shki	Display symbol		
Maximum nary degree drying	‡ <u>\</u>	C 0_	
Increased nary degree drying	+ [\\\	C 0=	
Standard- nary degree drying	555	C 03	
6. To store the value in memory, touch and simultaneously			

hold the buttons Serv 😳 quietAnd Refresh

for approximately 2 seconds.

9.3 Turning off the water container indicator

By default, the condensate container indication is switched on. When

When the container is full, it always turns on at the end of the drying cycle or during the drying cycle. If a condensate drain kit is installed, emptying the container produced automatically; In this case, the indication can be turned off.

Turn off the indication:

- 1. Turn on the device.
- 2. Wait approximately 8 seconds.

3. Select one of the available programs.

4. Touch and at the same time

hold the buttons

10. CARE AND CLEANING

10.1 Cleaning the filter

At the end of each cycle on the display symbol appears *Clean the filters*; this means that the filter needs to be cleaned.

> The filter collects lint, accumulating during drying cycle.

 (\mathbf{i})

For achievement optimal drying results regularly clean filter. Clogging filter leads to increasing cycle duration and increasing energy consumption. Clean the filter by hand and, if necessary, vacuum cleaner.

Â

WARNING Try not to

use water for cleaning fillets tra. Instead of this is a waste put the lint in trash bin ro to avoid pop adania plastic fibers in aquatic environment. One of two configurations is available:

 the Drain the condensate indicator is on when lit

symbol _ _ l – indication collection container condensation constantly **included** E.

1. Open the door. Pull the filter up.



2. Pull the hook to open the filter.



3. Use your hand to collect lint from both internal parts of the filter.



Throw the lint in the trash.

- 4. If necessary, clean the filter with a vacuum cleaner. Close the filter.
- If necessary, remove lint from the filter housing and seal. You can use a vacuum cleaner for this. Place the filter back into the filter slot.



10.2 Draining water from the collection container condensate

Empty the condensation container after each drying cycle.

If the condensate container is full, the program will run automatically prec is growing. On appears on the display symbol \sim *Drain the condensate*; uh that means that needs emptying thread container for collecting condensation SatA.

To drain the water:

1. Remove the condensate container, keeping it horizontal.



2. Pull out the plastic connector and drain the contents of the condensate container into a basin or suitable container.



3. Push the plastic connector back and replace the condensation container.

4. To continue execution

program, press the Start/Pause Dutton.

10.3 Cleaning the condenser

Symbol flashing on the display *Clean the condenser* indicates the need for inspection

condenser and its compartment. If there is dirt, clean it. Check at least once every 6 months.



ATTENTION!

- Don't touch metal surfaces are damp hands. Exists danger of injury. Use protective gloves. When cleaning, be careful to avoid
- damage metal surfaces.

For check:

1. Open the door. Pull the filter up.



2. Open the condenser cover.



3. Turn the lever to unlock the condenser cover.



4. Open the condenser cover.



5. If necessary you remove from capacitor and e th department pile. For this I can possible use a mock I rub a rag and/or

vacuum cleaner with brush.



6. Close the condenser cover.

7. Rotate the lever until it clicks into place.

8. Reinstall the filter.

10.4 Cleaning the sensor humidity



WARNING

Danger of damage humidity sensor. Not use for cleaning sensor abrasive materials or metal jaws.

To ensure optimal drying results, the device is equipped with a metal humidity sensor. It is located on the inside in the door area.

Over time, the surface of the sensor may become dirty, impairing drying performance.

In case of deterioration drying performance, it is recommended to wipe the sensor 3-4 times.

For cleaning, you can use the stiffer side of a dish sponge and a little vinegar or dish soap.

Cleaning the sensor:

- 1. Open the loading door.
- 2. Clean the surface of the humidity sensor by wiping the metal surface several times.



10.5 Cleaning the drum



ATTENTION!

Before cleaning, disconnect the device from the power supply.

Use a neutral detergent to clean the inside of the drum and its fins. Wipe the washed surfaces with a soft cloth.



WARNING

Do not use abrasive products to clean the drum. materials or metal jaws.

11. TROUBLESHOOTING

10.6 Cleaning the panel control and housing

Use a neutral detergent to clean the control panel and cabinet.

Use a damp cloth to clean. Wipe washed surface with a soft cloth.



WARNING

Do not use furniture cleaners or cleaning agents which may cause corrosion.

10.7 Cleaning ventilation slots

For removing lint from ventilation slots use a vacuum cleaner.

Fault	Possible reason	Solution
ness1)		
	The dryer drum is not connected to the mains.	Connect to the power supply. Check the fuse on the household distribution board.
	The door is open.	Close the door.
Dryer tub slave is not working melts.	The Off button was not ① On/ pressed.	Click on the button ① On off.
	You have not touched the Start/ D	Touch the button Start/
	The device is in mode expectations.	Click on the button ① On off.

Fault ness1)	Possible reason	Solution	
	Incorrect program selected.	Select the appropriate program. 2)	
	The filter is clogged.	Clean the filter 3)	
	Ironoptions Additional degree of sushki.4)	Change the value of the Add uo hal option. drying degree to a higher value.	
Results dissatisfaction creative.	The load is too large.	Do not exceed the maximum load level.	
creative.	The ventilation openings are clogged.	Clean the ventilation holes on the base of the appliance.	
	The humidity sensor inside the drum is dirty.	Clean the front surface of the drum.	
	The drying level is not set to the desired level.	Adjust the drying level. 5)	
	The condenser is clogged.	Clean the condenser. 3)	
Doesn't close boot door.	The filter is not locked in place.	Install the filter properly.	
	There is laundry caught between the door and the seal.	Remove any stuck items and close the door.	
Change programs or ^{options are not possible} Can.	Once a cycle has started, changing the program or option is not possible.	Switch the tumble dryer off and on again. Change the program or option as needed.	
Selecting Options not available. Produced by sound kovy signal.	The option you tried to select is not available for the selected program.	Switch the tumble dryer off and on again. Change the program or option as needed.	
There is no main bar broadcasting ban.	Drum light faulty.	Contact your service center to replace the drum light bulb.	
The display shows appears duration difference, difference anticipating from expected.	The drying time is calculated according to the size of the load and its moisture content.	This process is automated - the device works as expected.	

Fault ness1)	Possible reason	Solution
The program is not included.	The condensate container is full.	Empty the water from the condensation container and press Start/Pause button. 3)
Too co- short cycle daily shki.	Load dimensions are too small.	Select a time controlled program. The selected time must match the specific load. To dry one item or a small amount of laundry, we recommend selecting a short drying time.
	The laundry is too dry.	Select a suitable time controlled program or a higher degree of dryness. shki (for example Very dry)
	The filter is clogged.	Clean the filter
Too long drying cycle 6) To	The load is too large.	Do not exceed the maximum load level.
	The laundry was not spun well enough.	Spin the laundry thoroughly in the washing machine.
	o low or too high ambient temperature – this is not a malfunction of the device.	Make sure that the room temperature is not below +5°C or above +35°C. The best drying results are achieved at the optimum room temperature (18°C to 25°C).

1) If an error message appears on the display (e.g.**E51**), Switch the tumble dryer off and on again. Select a new program. Tap the Start/Pause button. If the device does not work, contact the service center and report the error code.

2) Follow the program description - see the "PROGRAMS" chapter.

3) See chapter CARE AND CLEANING.

4) Only for tumble dryers with the Additional option. degree of drying.

5) See Chapter "INDICATIONS AND RECOMMENDATIONS".

6) Note. After the maximum operating time of 5 hours, the drying cycle ends automatically.

11.1 Possible causes unsatisfactory drying results:

- The filter is clogged. A clogged filter will impair drying efficiency.
- The ventilation openings are clogged.
- The humidity sensor is dirty.
- The drum is dirty.

12. TECHNICAL DATA

• Unsatisfactory level of drying at settings according to default. See chapter*Adjusting the default dryness level*

 The room temperature is too high or too low. The optimal room temperature is between 18°C and 25°C.

Height x width x depth	850 x 596 x 638 mm (max 663 mm)
Max. depth with appliance door open 1108 r	nm pa
Max. Width with appliance door open 958 m	m pa
Adjustable height	850 mm (+ 15 mm – leg height adjustment)
Drum volume	118
Maximum load	8.0 kg
Voltage	230 V
Frequency	50 Hz
Noise level	65 dB
Full power	700 W
Energy class	A+++
Energy consumption when using the standard cotton program at fully loaded 1)	1.47 kWh
Energy consumption when using the standard cotton program at partial load. 2)	0.83kWh
Annual energy consumption 3)	176.50 kWh
When left switched on 4)	0.05 W

Type of use	Domestic
Permissible ambient temperature	from +5°C to +35°C
Protection against the penetration of solid particles and moisture is provided by the protective cover. Exceptions: Low voltage equipment is not protected against moisture.	IPX4

The product contains fluorinated greenhouse gas in a hermetically sealed circuit.

Gas designation	R134a
Weight	0.28 kg
Global Warming Potential (GWP)	1430

1) According to EN 61121. 8.0 kg cotton items at spin speed 1000 rpm.

2) According to EN 61121. 4.0 kg cotton items at spin speed 1000 rpm.

3) Annual energy consumption in kWh based on 160 drying cycles using a standard cotton program at full and partial load and consumption calculated for energy saving modes. The actual energy consumption for a given cycle will depend on how the appliance is used (EU REGULATION No. 392/2012).

4) According to EN 61121.

The information given in the table above is in accordance with European Commission Regulation 392/2012 implementing Directive 2009/125/EC.

13. ACCESSORIES

13.1 Kit for installation on a washing machine



Article number of additional accessories: SKP11GW, STA9GW

Available for sale at your nearest authorized store.

The vertical assembly kit can only be installed between washing machines and

tumble dryers,

listed in the booklet. See attached booklet.

Please read the instructions supplied with this accessory carefully.

13.2 Condensate drain kit



Accessory name: DK11.

Available from your nearest authorized retailer (can be installed on several types of tumble dryers)

Used for continuous drainage of condensate into a basin, siphon, sewer, etc. After installing the drain condensation from the water container is produced automatically. The condensate container must remain in the appliance.

The installed hose must be at a height of at least 50 cm and no more than 100 cm from the floor level. The hose must not form a loop. If necessary, shorten the hose.

Please read the instructions included with this product carefully. additional accessories.

13.3 Base with drawer



Accessory name: PDSTP10, E6WHPED2.

Available for sale at your nearest authorized store.

Used to increase the height of the appliance to make loading and unloading laundry easier.

The box can be used to store linen such as towels, detergents, etc.

Please read the instructions supplied with this accessory carefully.

14. QUICK GUIDE

14.1 Daily use





- 1. Click on the button ① On off to turn on the device.
- 2. To select a program, use the program selector.
- 3. To turn an option on or off, touch the corresponding button or combination of 2 buttons.

14.2 Cleaning the filter







At the end of each cycle on the display symbol appears *Clean filters*; it means that necessary Dimo about lime cleaning filter ra. 1. From cover two rtsu. Pull

fi or **tu**p X.

- 2. Pull the hook to open the filter.
- 3. Use your hand to collect lint from both internal parts her filter. Throw away the lint in the trash.

4. Touch the button Start/Pause.
 5. The device will start working.

14.3 Program

Program	Loading1)	Properties / Symbols on the label 🖸 🖸 🖸
Cotton	8.0 kg	Cotton.
	3.5 kg	Synthetic or mixed fabrics.
Mix Very fast	3 kg	Cotton and synthetic fabrics.
Sol wool	1 kg	Woolen fabrics. Gentle drying of wool items designed for hand washing. Remove items immediately after the end of the program.
😯 _{Silk}	1 kg	Gentle drying of hand-washable silk items.
Easy ironing	1 kg (or 5 shirts)	Easy care for linen that requires minimal ironing. Drying results may vary depending on the type and type of fabric. Shake each product you load before loading. When the program has finished, quickly remove the items from the drum and hang them on a hanger.
Bed linen	3 kg	Bed linen (sheets, duvet covers, pillowcases, mattress covers).
र्णि Sportswear	2 kg	Sportswear, clothing made from thin and light fabrics, microfiber and polyester.
Outerwear	2 kg	Streetwear, technical clothing, sportswear, brushed fabrics, waterproof and breathable jackets, windbreakers with a removable fleece or inner insulating layer. Can be tumble dried.
Blankets	3 kg	Single or double duvets and pillows (feather, down or synthetic filling).

1) Maximum weight is for dry items.

15. PRODUCT INFORMATION ACCORDING TO EU REGULATION 1369/2017

Product information	
Trademark	AEG
Model	T8DEC68S PNC916097873
Nominal load in kg	8.0
Ventilated or condensation drum dryer	Condenser
Energy efficiency class	A+++
Annual energy consumption in kWh based on 160 drying cycles using a standard drying program cotton at full and partial load and consumption calculated for energy-saving modes. Actual energy consumption per cycle will depend on usage.	176.50
Automatic or non-automatic tumble dryer	Auto
Energy consumption in kWh using standard cotton program and full load	1.47
Energy consumption in kWh using standard cotton program and partial load	0.83
Power consumption in Off mode (W)	0.05
Power consumption in W when left on	0.05
Duration of stay in the "Leave on" mode, in minutes	10
The information on the rating plate and this product data sheet applies to the standard drying program for full and partial loads; This program is suitable for drying cotton items of normal moisture content and is the most energy efficient in terms of saving both energy and water consumption when caring for cotton.	
Weighted operating time of the standard cotton program at full and partial load in minutes	134
Cycle duration in minutes with standard cotton program selected and full load	173

Cycle duration in minutes when selecting the standard cotton program and partial load	105
Condensing energy efficiency on a scale from G (minimum energy efficiency) to A (maximum energy efficiency)	В
Average energy consumption in percent using standard cotton program and full load	86
Average energy consumption in percent using standard cotton program and partial load	
Weighted energy consumption using the standard cotton prog at full and partial load	ram
Noise level in dB	65
Built-in	No

The information given in the table above is in accordance with European Commission Regulation 392/2012 implementing Directive 2009/125/EC.

16. ENVIRONMENTAL PROTECTION

Materials with symbol くう should hand over for recycling. Place packaging in appropriate recycling containers. Taking part in

recycling old electrical household equipment, you help protect the environment and human health. Don't throw away together with household waste

equipment marked with the symbol. The device should be delivered to a place for separate accumulation and collection of consumer waste or to a collection point for used household appliances for subsequent disposal.

🖉 Energy efficiency class in the Russian Federation: A+++

The date of manufacture of the product is indicated in its serial number, where the first digit of the number corresponds to the last digit of the year of manufacture, and the second and third digits correspond to the serial number of the week. For example, serial number 14512345 means the product was manufactured in the forty-fifth week of 2021.

Manufacturer: Electrolux Appliances AB, St. Göransgatan 143, 105 45 Stockholm, Sweden

Importer and organization authorized by the manufacturer: Electrolux Rus LLC, Kozhevnichesky proezd 1, 115114, Moscow, tel.: 8-800-444-444-8

Made in Poland

SADRZHAJ

1.INFORMATION ABOUT POVERTY	
2.POORTY-LESS	
3.PRODUCTION DESCRIPTION	
4.TEAM TABLE	40
5.PROGRAM	
6.OPTION	
7.BEFORE USING	
8.SVAKODNEVNA USAGE	47
9.KORISNI SAVETI	50
10.BEAUTIFUL AND CHISTE	51
eleven.SOLVING THE PROBLEM	
12.SUBMISSION TECHNIQUES	57
13. DEVICE	58
14. VODICH FOR BRZI POCHETAK	59
15. SHEET OF INFORMATION ABOUT THE PRODUCTION OF VEZI SA	A REGULATIVE
EU 1369/2017	61

FOR SALVATION RESULTS

Praise be that they have given us the AEG manufacturer. We sent smoga as a bismo to you in the last year, relieved gladly without stagnation, along with new technologies that have spoiled the bride-to-be. These functions are probably not supported by the error code. Please spend a few minutes reading this to get the most valuable information.

Visit our web page da biste:



We got advice from the carrier, brochure, solution to the problem, information about the service provider and corrections:

about the service provider and corrections: www.aeg.com/support Register your production for the sake of additional services: www.registeraeg.com

Buy an additional device, gutting material and an original backup business for your own money: www.aeg.com/shop

BRIGA ABOUT KORISNIKU AND SERVISIRAJE

Wek koristite originalne reserve business.

When you contact an authorized service center, please provide the following information: Model, production (PNC), serial. Ove information is based on technical characteristics.

🗥 Shame/oprez - Information about poverty. More

(i) information and advice

 ${\mathscr D}$ Information from the vezi with a sewn animal in the middle

The right to treason is denied.

1. INFORMATION ABOUT POVERTY

Before you forget about the installation and koriše ovog urea, please read the attached instructions. The manufacturer agrees against any damage or injury resulting from faulty installation or use. Feel the disgrace for using in a comfortable and attacking place for the future korisheњe.

Please read the attached instructions.

1.1 Povertylessness of the population and the Ossetians



Permanent risk of injury, injury or permanent disability.

- I can tell you that I am an old man, about 8 years old, and a person with poor physical, physical or mental abilities, who especially lack the skill and know how they are not in trouble with supervision or if they are in trouble with the use of money in the world. I start and grab it greater danger.
- Detsu uzrasta I will measure 3 and 8 years of old age, kao and especially sa veoma teshkim and folded disability, the requirement to live even under urea, as well as under the supervision of steel.
- A child who is 3 years old needs to remove his urinary injection under close supervision.
- Please allow the children to play with us.
- Keep your focus even on the day and settle it down to the beginning.
- Determine trezhit van homeshaya detse.
- Detsu and kuħne љmurderer tremble until the tide of God's gates is open.
- Ako ovaj apparatus ima ureħaj for the poverty of the detse, isti bi demanded that it be activated.

• I don't dare, my child, to have a clean and brown-colored urea without supervision.

1.2 Optimize the measure of poverty

- Please do not forget the specification of the urea.
- If you put the machine behind the right weight, you put the machine behind the dry weight, and then you put the complete set behind it. The set for the item, which can also be found on the code of the authorized seller, can be obtained by itself with the help of the attached device. Please read carefully before installation (look at the installation brochure).
- You can install it yourself or using prepared elements with the required space (look at the brochure for Installation).
- You can't install the urea iza gate, which is closed, the gates of the threads, the gates with a shark on the opposite country, which numb and the urea gates are open to the edge.
- Open the ventilation at the station, I don't dare to cover it with heat, washing, or any kind of undercover.
- OPRESS: The thread timer should not be applied to the thread by exterminating the thread.
- Attach the main cable to the main cable to the right side of the installation. Make sure that the jet is still available after installation.
- If the cable is unplugged, it will be necessary to replace the manufacturer by agreeing to a service center or a similarly qualified person to avoid electrical hazards.
- Do not exceed the maximum weight limit of 8.0 kg (check the "Program Report Card").

- You can't resist urea as well as products containing industrial chemicals.
- Clean the clouds or dust that have disappeared from the ambalage, which has bought the eye of the urea.
- Ureva nemojte pustati u rad without filter. Clean the filter after the dirt has fallen off before or after cleaning.
- Do not wash or dry neoprene fabrics in the machine using a dryer.
- Any mixture of substances used for cooking, acetone, alcohol, gasoline, kerosene, wax styling agents, turpentine, wax and wax styling agents required both hot water and an appropriate amount of detergent before drying in the machine.
- Stvari kao shto su sunerasta guma (foam od latex), cape for extinguisher, waterproof materials, komadi and clothes koji su su puta gumom or jastuci puњeni vat od sunerasta gume I don't dare and se drier at the machine for dry weight.
- Factories omekshivachi or slichni production moraju se koristiti ischechivo kak je induced by the manufacturer.
- Avoid sparks from objects that could cause a fire, such as fire or fire.
- IMPORTANT: Never park the machine behind a dry load near the edge of the dry cycle; If necessary, please, quickly evade the creatures and distribute them this way and that way.
- Following the actions of the government, seek out the government and get rid of the cable for attacking the student.

2. TROUBLE-FREE MISSIONS

2.1 Installation

• Do not install or corrode the urea.

• Decline the completna to the ambalage.
- Be careful when installing everything you have achieved.
- Always drive the racer with a decent measure of urea, but what is it? Protect your mitten and close your shoes.
- Avoid installation or corrosion in places where the temperature may be below 5 °C or above 35 °C.
- The feed area at which the urea biti montiran mora biti is equal to, stable, resistant to trampling and clean.
- Make sure that there is constant air circulation between the water and the flow.
- Well-prepared, urea perpetuated pestilence and stand vertically.
- The back of the urea pestra will be subject to protection.
- Whenever you put everything in position against the steel, use the lever check if Nivelisan is correct. Anyway, put your foot on the dock more gently.

2.2 Practical

I'm cutting off electricity



SHAME!

Risk of fire and jet impact.

- Connect the main cables to the main cable and to the edge of the installation. Drive the racer and wait for the attack of the cold to finally install.
- May the plague be reduced.
- Assure se da su parametri na plochitsa sa technical Characteristics of the compatibility with the agreed parameters are less electrical than for the attack.
- Perpetuate the spelling of a stolen student with protection from a jet blow.
- Do not wash or corrode the adapter of your device and the cable.
- Do not use the cable for attacking as soon as possible. Cable search for what you hear from the student.

• Do not touch the cable with a wet hand.

2.3 Usage



SHAME!

 There is a permanent risk of jet impact, fire, fire or irritation.

- I'll use it for a whole bunch.
- Do not wash or dry any item you put on or wash.
- Once everything is covered with a styling product, roll the additional cyclus and dry it in front of it so that the cyclus is dry.
- Dry the fabrics thoroughly in any weather conditions. Please note the instructions on the label.
- Do not drink condensed water/distilled water from urea and store it in the same way. Maybe yes, because of the health problem, the code љudi and kuħnih љubimatsa.
- Don't wait until the gates of the urea are open.
- You cannot dry wet clothes when there is dripping water.

2.4 Interior lighting



 For the sake of the cialis of the production and reserve business, the cialis of which we sell for free: Ove the cialis of the su is intended and from the extreme physical condition of the kuħnim aparatima, such as the temperature, vibration, moisture, or su is intended to signal information about the uranium state . Nisa is foreseen for

I will use ureaima and nisa with others for illumination

space near the home.

• The brightness of the diode is visible to the pupils; Don't look directly at the Lord's image. • Yes, they replaced the interior lighting, contact supervised service center.

2.5 Bliss and purity



SHAME!

Risk of damage or swelling of the urine.

- Do not expose eyes to water or steam for cleaner results.
- Clean the surface with a damp cloth. Coristite iskusti neutralne detergent. Avoid contact with abrasive, abrasive, abrasive, clean, or metal objects.
- Wake up fresh water when you clean the ureaj kako not biste štetili cool the systems.

2.6 Compressor



SHAME!

Posta rizik od osteћења ureђaja.

 The compressor and compressor systems of the machine for dry weather in Pune with a special means of kojie not sadrzhi fluoro-chlorocarbonate. Ova systems of pestilence, let there be evil. A damaged system can cause problems.

2.7 Service

- For repairs, please contact an authorized service center.
- Coristite is original, not reserved, business.

2.8 Odlagie



Risk of harm or loss.

- Look for power from the electrical supply and water supply.
- Cut out the middle electrical cables in a place near the urea and lay them aside.
- Decline your hand od the gate and biste have hidden it and se detsa or kuħni љubimtsi title at the bubњu.
- Place the device in a warehouse where it is important to avoid removing electrical and elektronskikh ureħaja (WEEE).

3. PRODUCTION DESCRIPTION



Water tank
Command tabla
Interior lighting
Gate of the Uraj
Filter

 \mathbf{i}

6 Pločica sa technical And characteristics

For the sake of laksheg ubatsivaњa

weight or original installation, gate su reversible. (take a look at the

posebana letak).

- 7 Slots for air
- 8 Capacitor cap
- 9 Capacitor cap
- 10 Podesive Nogice

4. TEAM TABLE



4.1 Display



Symbol on the display	Description of the symbol		
	maximum weight loss		
2	Delayed start option added	А	
30'-20h	selection of delayed start (30 min -	20 h)	
1:50	Cycle times display		
Ø€	alarm cleared		

Symbol on the display	Description of the symbol
Ŧ	the function for povertylessness is not yet taught
⊖ [™]	This option has been learned during drying
10:2:00	Izbor times susheva (10 min - 2 h)
le contra	indicator: defecate the reservoir with water
۲	indicator: <i>clean the filter</i>
≣	indicator: <i>check the capacitor</i>
∠ ⊞ ⊞ *	options for drying weight: Iron (Pegla), Orman, Orman +, Extra
ECO	ECOoption deleted
d₿	Extra option is included
4	Refresh option disabled
+30 _{min.} , +60 _{min.} , +90 _{min.}	the further implied phase against the groove: Time 30', Time 60', Time 90')
555	indicator: <i>dry phase</i>
Ý	indicator: <i>cold phase</i>
Ť	indicator: <i>phase zashtite od guzhva</i>

5. PROGRAM

Program	Quantity1)	Properties / sign of the material2)	
) SPamuk	8.0 kg	It's not more cottony fabric.	/00
△ Synthetics	3.5 kg	Synthetics or fabrics are not baggy.	/000
MIX Extra kratak me- shati	3kg	Wash your clothes and clothes on synthetics.	/000

Program	Quantity1)	Properties / sign of the material2)	
		Vunena odeħa. Thankfully, the dry clothes are all over the place. Throw the clothes out of the machine at the end of the program.	
Solution Vuna 紀	1kg	WOOL HAND WASH SAFE	
		Cyclus dryer in the machine has been approved by the Woolmark company for drying clothing items with the "hand right" etiquette, as long as all dryer clothing items have been approved by the manufacturer. Spend the beginning of the day on the etiquette, hanging for the remaining items for the weight. M1641	s v
		The Woolmark symbol is a certificate sign for many countries.	
Svila	1kg	Fortunately, dry, woolen clothes / 🖸 🖸 🔘	
E Lako	1 kg (or 5 koshuia)	Some fabrics are in good condition and require minimal ironing. The results of drying can be different from the dependence on the fabric. Crack everything before him and place it near the urea. After completing the program, remove the clothes from the car and dry them on the hanger.	
Krevetnina	3kg	Posteina kao shto je posteљina for jednu or two persons, ja- / つつつ)
গ্রি _{Sporty}	2 kg	Sportswear, tank and light- colored fabrics, microfiber, / 🖸 🖸 🕻 polyester.)

Program	Quantity1)	Properties / sign of the material	2)
on the open	2 kg	Clothes that can be worn are waterproof, warm and sportswear, water-resistant and, as a matter of fact, allow air to pass through, as well as with the supply of water or with the interior of the clothing. The weather is dry and the car has dry weight.	000
@ Organi	3kg	Organs for one or two persons and food (with feather, paper or / (synthetic feather).	300

1) Maximalna tezhina se odnosi na suv vesh.

2) Look at the garment for the sign of the material SVAKODNEVNA USAGE: Priprema weight.

3) Program Pamuk ECO in combination with selection *Cupboard (orman)* Dry plus "Standardney program for pamuk" at the warehouse with Commission Directive EU 392/2012. Weather for drying the usual wet floury weight and then the most effective program for drying wet floury weight means gutting energy.

5.1 Selecting programs and options

			Option		
Program1)	\$\$\$\$ Osu- shi plus	dB Ex- tra ħuti	记 Dugo against Guzhvava	む Lighting live	^{- [까} Time meh
C O Pamuk		•	-	•	•
\triangle Synthetics					-
Extra kratak stir					-
ණි. Vuna 🖄				•	■ 2)
😯 Svila 🛍				•	
= Lako				·	
🕏 Krevetnina					
ੰ Sporty					
🕙 on the open					
P Organi					

1) While using the program, you can add one or more options.

2) Take a look at your clothes OPTION: Time is learned Vuna program

5.2 Submission of gutting

Program	Return to / no longer wet news	Drier times Yeahı)	Gutting ka elek- trichne energy ²)
	Pamuk ECO 8.0 kg		
Drman	1400 rpm / 50%	156 min	1.31 kWh
	1000 rpm / 60%	173 min	1.47 kWh
Iron (Pegla)	1400 rpm / 50%	120 min	0.94 kWh
	1000 rpm / 60%	137 min	1.12 kWh
Pamuk ECO 4.0 kg			
Drman	1400 rpm / 50%	93 min	0.72 kWh
	1000 rpm / 60%	105 min	0.83 kWh
	Synthetics 3.5 kg		
Drman	1200 rpm / 40%	65 min	0.47 kWh
	800 rpm / 50%	80 min	0.60 kWh

1).

2) The unsuitable temperature allows for more space and/or loss of centrifugation, allowing for longer processing of the cycle and increased evisceration energy.

6. OPTION

6.1 Dry plus

Ova option to lubricate and se posgne zakhtevani nivo desushennosti vesh. I can choose:

 $\underline{ } = \underline{ } = - right for the ash - nivosuvo for peglaњe.$

 $\square = = = -$ urgently for the deposit – nivo **suvo for orman**- imply choice which is also included with the program.

 $\blacksquare = = -$ urgently for the deposit – nivo **suvo for peglaњe +**.

____ = ≡ – urgently for the deposit – nivo**izuzetno suvo**.

6.2 🕏 tras

For the sake of the same beech, without prejudice to the quality of the dry land. Ureuya for the sake of the sweet tooth of the cyclus.

6.3 🛇 ECO

This option means that you have learned the code of your program.

Eviscerate energy at minimum level.

6.4 Dugo vs. Guzhwaja

By blowing the phase against the gut for 120 minutes (30 minutes) on the edge of the drying cyclus. At the end of the drying phase, the cotton around it from time to time somehow disappeared from the dry clothes. Vesh You can get rid of the current in the phase against the buzzer.

6.5 Refresh

For the refreshing weight of which we have the order. The maximum weight is not less than 1 kg.

6.6 🕬 me

For cotton, synthetic and non-bag fabrics. Omoguva korisnitsima and drying time for at least 10 minutes before

maximum 2 hours (coracim has 10 minutes). What is the option for

maximum, the indicator of the amount of weight is not constant.

6.7 🕬 eme (Vreme sushi) for the program (Vuna)

The option of using the Vuna program (Vuna) for the addition of final dryness on your or May day.

6.8 Postponed



Please put this program aside from 30 minutes to a maximum of 20 hours.

7. BEFORE USING

Brave sa zade country bubњa automatski se put the car behind the dry activator along the right path. Tom is pretty good, maybe a little bit of beech.

For the return of courage in the back country of Bubu:

- 1. Teach your urea.
- 2. Select your programs.

3. Press Dugme Start/Pause. Buba in peace and all around. Brave sa zade country bubњa se is automatically deactivated. 1. Select the program and drying option.

2. Re-add the dugme. Set 🛛 🕀 aside.

The time delay appears on the display (eg.

I C H Ako the program is required and the starting point is 12 sati.)

3. For activating the option \bigcirc

Postponed, finish the Start/ Pause dugme.

 \triangleright

Time is marked on the display.

6.9 Alarm └─ ⊯ ──

Sound a signal to everything:

on the edge of the cyclus;

• stitch on the stitching and the edge of the phase.

The alarm option is not automatically disabled. You can use this option to activate or deactivate the sound.

To use the term for drying an item:

• Clean the dryer in the machine with a damp cloth.

• Curl the program for 1 sat with a damp cloth.

To honor the cyclus dry (approx 3-5 min.) no sound can beat something else. Ovo se deshava trace activating the compressor. Ovo je The urea code has been changed

for both the compressor, the refrigerator and the freezer.

7.1 Neobichan Miris

It's already tightly packed.

Finally unpacking the production you can visit Neobichan Miris. That's it The code is normal from new ones.

This is aimed at the higher differences in the composition of the material, which I can at the same time create an unusual world.

During the current period, the corisha, finally some cyclus dryness, the neobichan myris gradually disappears.

7.2 Zvutsi

 (\mathbf{i})

Cyclus current I can barely distinguish the sound. That's how normal the sounds are, and I'm happy with the current.

Radney compressor.



Rotating the beans.



Radni ventilatori.



Radna pump and transfer of condensate to the reservoir.



8. SVAKODNEVNA USAGE

8.1 Priprema weight

Ø

Veoma honestly je odeňa after cyclus praњa blinded and confused taken away. Dry blind and clothes taken away not fictitious. Yes, bi se osigurao rules the flow of air and is evenly drier, delegated crack and place your clothes on the dryer.

Yes bi se osigurao odgovarajuħi drying process:

- Close the patent immediately.
- Smoke dugmad on Yorganskim prekrivachima.
- Do not dry dried cravate and trake (eg trake od ketseje). Treat them well, but you will change some programs.
- Avoid all items from the sepov.
- Place the object in the same direction as the inside layer

od pamuka. The tormented layers of the pestilence will forever be vindicated.

- Forever desit programs koi odgovara vrsti vesha koi se sushi.
- Don't put it too bright and dark.
- Use a program that is suitable for cotton, jersey and woven clothing, as best as possible stingy weight.
- Do not exceed the maximum amount of weight that is placed on the clothing or program ordered on the display.
- Dry your items thoroughly in the machine after drying. Here you go, take a look at the label.
- Do not dry items large or small. Mali objects can be so great and let them remain moist.
- Crack the clothes and fabrics before you put them in the car behind the dryer. That is, however, everything escaped and the outer fabric did not dry out the cyclus, but the place remained damp.

Sign on the Internet Katie	Description
Ø	Everything is expected behind the dryer at the machine behind the dryer.
\odot	Everything is expected for drying at the machine for drying at any temperature.
\odot	Everything is expected for drying at the drying machine itself at a low temperature.
\boxtimes	Everything is expected behind the dryer at the machine behind the dryer.

8.2 Weight loss



OPRez

Believe me, everything below is entitled the Gate of Change urea and humenopod zaptivacha.



- 1. Povucite and open the gates of the urea.
- 2. Ubatsite vesh, komad po komad.
- 3. Close the gates of the urea.

8.3 Sealing urea



For education:

Press the dugme "Ollaskљucheno). Once this is done, some indicators will appear on the display.

8.4 Automatically search functions

Yes, if the eviscerating stream washed away, the function of the Automatically searching Automatically searching urea:

- ako se sensorsko dugme para start/ ne dodirne u roku od 5 minute.
- 5 minutes after completing the cycle.

Squeeze the Dugme (D "O" (Skљucheno)
Yes, they taught me	it's flying.
How about it?	n, some
indicators	Yes on the display.

8.5 Cheap program



Koristite birac program da biste desili program.

The display will show the current program.

I	P
---	---

It's dry time depending on the growth rate (quantity and composition), ambient temperature and humidity depend on dry phase centrifuge.

8.6 Options

While using the program, you can use Edna or more special options.



Yes, if you activated or deactivated the option, press one item or a combination of two items.

Each symbol will appear on the display or above the LED light.

8.7 Option to blockade for povertylessness

If you select the "Blockade for the sake of poverty" function, stop playing with the hell out of the world. Option to blockade for poverty detse blockera svu dodirnu dugmad and birach program

(this option does not block dugme \bigcirc "O" (Seeked)).

You can activate the option for povertylessness:

• before him what will you finish the dugina **Start/Pause**- I can't say that sideways

 why don't you finish the dugma pause Start/ programs and selection options accessible to anyone.

Activate the option for poverty dece:



- 1. Place dry weight on the machine.
- 2. Select 1 available program.
- 3. At the same time, press and hold 2 dugmets.

The symbol will appear on the display

 Yes, they deactivated the option for poverty dece, right now press the mountain dugmad candle simbol do not stop.

8.8 Secret program



Yes, the program has been revived:

Finish the dugme |P|| Start/Pause. The LED indicator from the arcmetal stops and remains active.

8.9 Exchange program

Yes, they changed the program:

- 1. Press the dugme "O" (Фкљисheno) and biste iskљuchili ureђaj.
- 2. Press the "O" (Iskљucheno) agan on the dugme so that you learn it.
- 3. Install new software.

8.10 Edge program

(1) Clean the filter and excrete the reservoir for water after draining the cyclus sushi. (Take a look above all NEGA AND CHISHEEE.)

When the drying cycle is completed, the symbol will appear on the display. At o If the Alarm option is activated a sound signal will sound if someone is shocked by current for a minute.



But do not search for the urea, but the phase against the buzzer (do not activate your program).

Trepere symbol signaling device is damaged phase against Guzhva. Vesh mozhe da se izvadi dok traje ova phase.

Yes, they drove everything away:

1. Press the "O" (Iskљuckeno) on the dugme for two seconds and biste iskљuchili urђaj.

9. KORISNI SAVETI

9.1 Ekoloshki saveti

- Please strain everything dry.
- Do not change the amount of weight that is assigned to the clothing program.
- Once dry, clean the filter.
- Don't wash and peel the fabric first, and then dry it. At the machine behind the dryer, the fabric is not automatically placed in a mecane.
- The water from the reservoir may accumulate on dry clothes. Right morate and filter water and biste evaded ceased tekstilna vlakna (mozhe se koristiti obichan filter for cafe).
- Keep the air vent slots at the bottom of the urea always clean.
- Make sure there is a good flow of air at the place where it is required and installed.

9.2 Adjunct impliednog nivoa dryness

Yes, biste was exchanged for the meaning of dryness:

- 1. Teach your urea.
- 2. Squeeze for approximately 8 seconds.
- 3. Select 1 available program.

- 2. Open the gates of the urea.
- 3. Get rid of your clothes.

4. Close the gates of the urea. Can be broken down for undesirable drying results:

- Negotiable prices mean no dryness. Take a look at the clothes *Cheaper implied nivoa dryness*
- Temperature is low or high. The optimal room temperature is between 18 °C and 25 °C.

4. From time to time, finish and

delay dugmad delay dugmad delay dugmad delay for the second secon

When the symbol appears on the display:

- **COL** Maximum dehumidification
- **COL** Extra Suvo
- **LOE** Standard dehumidification
- 5. Press firmly on the dome **Start**/ **Pl Pause**you won't reach the doc zheљenog nivoa dryness.

Dryness Le- vel (drained nost)	Symbol on	the display
Maximum on drainage news	‡∭	۲۵_
Extra Suvo	+ [\$\$\$	CO=
Standard dehumidified	555	C 0 3

6. Yes, the best memorials are cheap, finish them in time and hold them tight

dugmad $\stackrel{\text{dB}}{\hookrightarrow}$ Extra foodAnd $\stackrel{\checkmark}{\backsim}$ Refresheye two seconds.

9.3 Deactivate reservoir indicator $\stackrel{\scriptstyle\leftarrow}{\sim}$

The water indicator is not supposed to be activated. *It is light on the edge of the dry cyclus or the current of the cyclus as a reservoir for water pun. Ako je istalirana oprema for double water, the reservoir is se Automatically prazni and the indicator can be deactivated.

To deactivate the indicator:

- 1. Teach your urea.
- 2. Squeeze for approximately 8 seconds.
- 3. Select 1 available program.

10. BEAUTIFUL AND CHISHEEE

10.1 Filter cleaner

On the edge of the cycle, on the display Pali symbol *Filter*and morate and cleanse the fiter.



On the filter of the rusty sieve, the vlakna is electrocuted cyclus.



Yes, you have learned the worst lessons from the dry land, redundantly clean the filter sealed filter blow out the line cyclus and povevac gutting energy. Clean the filter by hand and, as it is not necessary, we are strengthening.

Â

OPRez Avoid drinking water that is cleaner than the filter. Place toga bacite vlakna u kantu za smħme (avoid rasping plastic in Lacan's

1. Open the gate. Povucite filter

Woden Wednesday inu).

4. In time, remove and

zadrezhite dugmad StreshAnd

There are only 2 configurations available:

• Reservoir indicator:

___ - tank indicator

for water It is immediately activated

Reservoir indicator:

for water It has been deactivated



2. Go away and open the filter.



3. Buy the liquid by hand from the internal filter.



Batsite vlakna u korpu za smħme.

- 4. When needed, clean the filter with a cleaner. Close the filter.
- 5. If it is not necessary, remove the stains from the storage and refill of the filter. You can yes koristite usisivach. Turn the filter back at the opening behind the filter.



10.2 Prague water reserve

Drain the reservoir in condensed water until it is dry.

What is the reservoir with condensed water, program it automatically

zaustava. Symbol *Reservoir* Everything will appear on the display and you will pay for the water in the reservoir.

Yes, the biste defiled the reserve for water:

1. Make a reserve ar for water and tremble ha u horiz online I suppose.



Pour the plastic bag for luck and empty the water from the drain or drain.



3. Go back plastically for luck and place

reservoir for water back to his place.

4. Press for the program guide dugme start/pause.

10.3 Capacitor size

Ako simbol \implies *Capacitor*Treperi on the display, check the capacitor and Jehovah's barrier. Ako ima That's right, clean it up. I'll check and add it at six months.



SHAME!

Don't add metal We bare our hands. Rizik is harmed. Wear a mitten. Clean the page as if it weren't enough to cover the metal povrshina.

Yes, they added pregled:

1. Open the gate. Povucite filter nagore.



2. Open the capacitor cap.



3. Curl the handle and remove the condenser cap.



4. Lower the condenser flap below.



5. As needed, from the capacitor behold, he's on his way. Mo use moisturewell, krpu and/or usisivach sa dod atomically clear.



- 6. Close the capacitor cap.
- 7. Bend the handle onto the dock without clicking it into place.
- 8. Rotate the filter into place.

10.4 Smaller sensors humidity



OPRez

Rizik od osteħeњa humidity sensor. Be mute and bark abrasive material or abrasive material for the sake of the sensor.

Yes, we have seen the best results of the dryness of the urea and it is determined by a metal humidity sensor. It is not placed on the inner country of the gate.

The current causes the sensor to be damaged, but everything is forbidden.

Please clean the sensor at the 3rd or 4th point, or if you notice it has not yet reached the point of dryness.

For the sake of cleanliness, you can yes koristit the solid country of Sunjer for the right posuḫa and a little sirħet or flow for the right posuḫa.

Yes, they cleared the sensor:

- 1. Open the gate beyond the gate.
- 2. Clean the surface of the humidity sensor so that you can paint some dirt on the metal surface.



10.5 Chishy diamond

Â

SHAME!

Look for the urea cable from the middle of the street and clean it.

Coristite standard neutral breather and biste cleaned the inside of the bean and therefore the bean. Dry the cleaned surface with mecan detergent.



OPRez

11. SOLVING THE PROBLEM

Be mute and bark an abrasive material or a fine powder for a cleaner price.

10.6 Chishchee team tablet and kushista

Koristite standarni neutrali sapun da biste cleaned the command panel and kuvishte.

Coristiate wet cereals for cleaner. Dry the cleaned surface with mecan detergent.



OPRez

Be mute and bark funds for less place or funds for the cheapest price I can for due to corrosion.

10.7 Smaller slots for air

With the help of the user, move the edge of the cut for air.

Problems1)	I can teach you a lesson	Decide
	The car was then transported to the site by a spray jet.	Take it to the average student. Check osigurach u kutija sa osigurachima (kujna insta- cija).
	The gates of the urea are open.	Close the gate.
Car per day no weight on the neck for the sake of.	Dugme ① "O" (Seeked) below it was squeezed.	Squeeze the Dugme ① "O" (Is) kucheno).
	Dugme Start/pause sounded below finished.	Finish the dugme DI Start/ pause.
	It's all right with the seasoning regime.	Squeeze the Dugme ① "O" (Is) kucheno).

Problems1)	I can teach you a lesson	Decide		
	Selected a variety of neogovarajuħi programs.	Select your preferred programs. 2)		
	The filter is not running.	Clean the filter. 3)		
Nezadovava- јући results dry land.	STATE Dry Plus option is not connected The Iron (Pegla).4)	Change the option //// Drain plus on Vichy degrees.		
	The car is not loaded with a large amount of weight.	Don't forget to exceed the maximum allowed amount of weight.		
	Close the slots behind the air flow.	Clean the slot for the air flow through the hole at the bottom of the drain.		
	On the sensor for moisture unutar bub- Clean the first country bub. I'm right.			
	Nivo drainage is not under the same name.	Add some dryness. 5)		
	The capacitor is not switched on.	Clean the condenser. 3)		
The gate behind the road No problem I won't close it	The filter has been put in its place.	Place the filter at the right position.		
	I will change the name of the gate and the guard.	Turn down the titles of the items and close the gates.		
I can't change your ova program or option.	Finally, once the cycle is started, you can change the program or option.	Search and teach the machine for dry weight. Change the program or option as necessary.		
I can't select option Yeah. Emitting it sound the signal.	The option you tried and choose is available for selecting a program.	Search and teach the machine for dry weight. Change the program or option as necessary.		
Bubu has no voice light	The phone's dialect is still faulty.	Contact the service center to replace the syhalice with the bottle.		
Unchecked During the cycle, the dryness is while eating due to the amount of weight and cyclus moisture content. Everything is on dis- Ident care.		Ovo se obava automatically - for the sake of it is correct.		

Problems1)	I can teach you a lesson	Decide
Program active	Water tank je pun.	Use the reservoir for water and press the Start/Pause ugme. 3)
Cyclus drya It's so beautiful So.	The amount of weight is still small.	Select the program time. Temporary pestilence and there will be a quantity of weight in the warehouse. For dry food or small amounts of weight, drying times are relatively short.
50.	Vesh je previshe suv.	Select a program at the same time or completely dry it. ness (eg. <i>* Extra</i>)
	The filter is not running.	Clean the filter.
Cyclus drya I'm not sure 6)	The amount of weight is still great.	Don't forget to exceed the maximum allowed amount of weight.
	The entire pre-war era is a gigantic centrifuge.	Please strain the centrifuge at the machine at your right.
	Room temperature is either low or high - ovo nije kvar na ureђaju.	Make sure that the temperature in the area will be at least +5 °C and at most +35 °C. The optimal temperature for achieving the best drying results is between 18 °C and 25 °C.

1) If the display shows a guarantee for sin (eg.**E51**): Search and learn the car at a dry weight. Select new program. Click Start/Pause. If you are not sure, contact the service center and give them the error code.

- 2) Read the program description look at the PROGRAM code.
- 3) Take a closer look BLESSINGS AND CHISHEEE.
- 4) The machine itself for drying with the option Drying plus.
- 5) Take a look at the clothes of SAVETI AND NAPOMENE.
- 6) Reminder: After the last 5 satis, the cycle will automatically end.

11.1 I can tear you down for bad things drying result:

- The filter is not running. Clean the filter and make it dry.
- Close the slots behind the air flow.
- Humidity sensor Right.
- Buba is right.

- Negotiable prices mean no dryness. Take a look at the clothes *Cheaper implied nivoa dryness*
- Temperature is low or high. The optimal room temperature is between 18 °C and 25 °C.

12. SERVING TECHNIQUES

Hanging x width x club	850 x 596 x 638 mm (max 663 mm)	
Max. club code for opening the gate urea- 1108 mm ja		
Max. width code for opening the gates of the Urals	958 mm	
Applying visina	850 mm (+ 15 mm - adjustable leg)	
Zapremina bubња	118	
Maximum amount of weight	8.0 kg	
Napon	230 V	
Frekventsia	50 Hz	
Nivo for the sake of sound	65 dB	
Ukupna snaga	700 W	
Class of energy efficiency	A+++	
Gutted energy for standard pamuka programs with maximum quantity weight 1)	1.47 kWh	
Gutted energy for standard pamuka programs with quantity of weight od maximum. 2)	0.83 kWh	
Year of electrical energy 3)176.50 kWh		
Left-handed absorption mode 4) 0.05 W		
Absorption mode disabled 4)	0.05W	
Type of corishka	Dominance	
Room temperature allowed	+ 5 °C to + 35 °C	
Nivo zashtite od prodira khvrstih ochistitsa and moisture spring zashtitni omotach, having studied the places on which the frame under the low napon is not zashtit from moisture	IPX4	
Ovaj proizvod sadří hermetički is closed with gas sa fluor, koji utiche na efekat staklene bashte.		
Extinguisher sign	R134a	
Tezhin	0.28 kg	

Global warming potential (GWP) 1430

1) Complies with EN 61121 directive. 8.0 kg centrifuge at 1000 o/min.

2) Complies with the EN 61121 directive. 4.0 kg centrifuge at 1000 o/min.

3) One year of gutting electric energy in kWh, based on 160 cyclus of the drying standard program for drying flour weight with a punom or delimitic рињи, kao and gutting in the low gutting mode. The total electrical energy according to the cycle depends on how much energy is generated (REGULATIVE (EU) No. 392/2012).

4) Complies with EN 61121 directive.

Information is available at the warehouse with approval 392/2012 for the application of EU Commission Directive 2009/125/EC.

13. DEVICE

13.1 Complete set



Device name: SKP11GW, STA9GW You can use the seller's code.

Oprema for the word mozhe da se koristi iskuchivo sa machine for the right and machine for drying some su assigned to the flight. Take a look Letak applications.

Please read this page some troubles finished off the bond<u>Yes</u> thu op rhema.

13.2 Charges for double water



Name of the supplement: DK11.

You can get the code from the seller (you can beat the additional data from a certain type of machine for drying weight)

For the water supply to the condensed water, there is a drain, a siphon, a drain, etc. Finally, the installation, the water reservoir is automatically dry. The reservoir for Mora water will be at the Urada.

Installed tsrevo mora biti na visini od minimum 50 cm to maximum 100 cm od nivoa poda. The heart of the earth is frozen. The prick is not necessary, shrink the belly.

Please read the steps of some people who have achieved the necessary conclusion.

13.3 Stay with fiok



Device name: PDSTP10, E6WHPED2.

You can use the seller's code.

For the weight of the urinary tide, what a loss of weight and weight.

Fyoka mozhe da se koristi za chuvavie vesha, e.g.: peshkirs, produce for chisheњe, etc.

Please read the steps of some people who have achieved the necessary conclusion.

14. VODICH FOR BRZI POCHETAK

14.1 Svakodnaya use

3. Yes biste activated or

deactivated C and op yeah, squeeze it those



14.2 Filter cleaner



On the edge of the cycle, on the display Pali symbol *Filter*and morate and cleanse the fiter.

- 3. Buy the liquid by hand from the internal filter. Batsite vlakna u korpu za smħme.
- 1. Open the gate. Povucite filter nagore.
- 2. Go away and open the filter.

14.3 Program

Program	Quantity1)	Properties / sign of the material $\begin{tabular}{lllllllllllllllllllllllllllllllllll$	
Pamuk	8.0 kg	It's not more cottony fabric.	
A Synthetics	3.5 kg	Synthetics or fabrics are not baggy.	
MIX Extra kratak interfere	3kg	Pamper yourself with synthetics.	
الله Vuna ا	1kg	Vunena odeħa. Thankfully, the dry clothes are all over the place. Throw the clothes out of the machine at the end of the program.	
Svila	1kg	Fortunately, the dry woolen clothes are handmade.	
E Lako	1 kg (or 5 koshu ља)	Some fabrics are in good condition and require minimal ironing. The results of drying can be different from the dependence of the fabric on the fabric. Crack everything before it and place it near the urea. Once the program is complete, remove the clothes from the machine and dry them on the hanger.	
TREvetnina	3kg	Posteoin and what about the post, Anathd for Edna or dyou especiallyjastuchnitse, jorgans Taypdekrivachi.	

Program	Quantity1)	Properties / sign of the material $\ igodot \ \ igodot \ \ egodot \ igodot \ \ igodot \ \ egodot \ \ egodot \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$
Î Sporty	2 kg	Sportswear, tank and light-colored fabric, microfiber, polyester.
on the open	2 kg	Clothes that can be worn are waterproof, warm, and sportswear that are waterproof and waterproof, as well as allowing air to pass through, as well as with the supply of clothing. The weather is dry outside the car.
Organi	3kg	Organs for one or two persons and food (with feather, paper or synthetic feather).

1) Maximalna tezhina se odnosi na suv vesh.

15. SHEET OF INFORMATION ABOUT PRODUCTION OF VEZI SA REGULATIVE EU 1369/2017

Production information sheet		
Zashtitni sign	AEG	
Model	T8DEC68S PNC916097873	
Nominal capacity in kg	8.0	
Drying machine with air ventilation or with condenser	Capacitor	
Class of energy efficiency	A+++	
Gutting electrical energy in kWh, based on 160 cycles of the standard program for drying flour weighed with a machine in either Puna or partly Puna, kao and gutting in the lower gutting mode. The boiled gutting electric energy according to the cycle depends on the starting point on which urea crust.	176.50	
Automatic dry weighing machine or non-automatic dry weighing machine	Automatski	
Electrical energy in kWh per standard unit is 1.47 grams per pack for each machine in Pune		
The total electrical energy in kWh per standard unit is 0.83 grams per pack for each machine, diligently.		
The gutting stream of the water (W) is removed	0.05	
The eviscerating jet from the water (W) when the urea is still installed	0.05	

Trajaње u minimim kada ureђaj osta ukљuchen	10	
"Standard programs for drying" which are the same cost when the machine is pumped or separately the standard programs for drying are applied to the labels and to the planting plant; The new weather program is for dry, normal, wet, floury weight and the most important program is for the dry, normal, and electrical energy aspect.		
The following program has been written for the minute for "standa or program for every machine in Pune or specifically in Pune."	rd 134	
The best program for the minute for the standard program for the memory of the machine in Pune	173	
The best program for the minute for standard programs for pamuq kada je machine delimitno puna	105	
Efficiency class of condensation on the rocks from G (most efective) to A (most efective)	В	
Prosechnaya efikasnost condensation at percentim, per standa 86 program pamuka kada machine puna	ard	
Prosechnaya efikasnost condensation at percentim, for the standard 86 program pamuka kada machine delimitno puna		
Ponderisana efikasnost condensation for "standard program 86 per pamuk kada machine puna or delimitno puna"		
Low level of sound in dB	65	
Urgency Yes/No	Not	

Information is available at the warehouse with approval 392/2012 for the application of EU Commission Directive 2009/125/EC.

16. EKOLOSHKA FOOD

Recycle materials with symbol

 \bigcirc . Place the package in a separate container for recycling. Help protect animal health and human health and recycle waste materials from electronic and

electrical urea. Ureђaje

Believed by the symbol, but laugh. Turn production at the local center for recycle or repay the Opshtinsky office.

www.aeg.com/shop



136946743-A-232020

ERE ⊂€

